

Application specific ratings of filters for negative tone developer

Toru Umeda^{*a}, Yukihisa Kawada^b, Kazushi Masuda^b, Naoya Iguchi^c, Tetsuya Murakami^d and Shuichi Tsuzuki^a

^aNihon Pall Ltd., 46, Kasuminosato, Ami-machi, Inashiki-gun, Ibaraki, Japan, 300-0315,

^bFUJIFILM Electronic Materials Co., Ltd., 4000 Kawashiri, Yoshida-cho, Haibara-gun, Shizuoka, Japan 4210302, ^cFUJIFILM Corporation, 4000 Kawashiri, Yoshida-cho, Haibara-gun, Shizuoka, Japan 4210396, ^dNihon Pall Ltd., 6-5-1, Nishishinjuku, Shinjuku-ku, Tokyo, Japan, 163-1325

ABSTRACT

Negative tone development is being employed widely because of its superior resolution. Pall is developing filtration products specially targeted for these high resolution applications. High particle retention and low extractables are key aspects of filtration products known to improve on-wafer defectivity. In the current study, we have found that filtration efficiency of the various filter types towards palladium-heptylamine nanoparticles correlates strongly to actual particle removal determined by on-wafer inspection metrology. Furthermore, using the afore mentioned nanoparticle testing metrology, high retention membranes with low extractables were selected. Particle challenge testing is much simpler than on-wafer defectivity inspection and enables faster and effective filtration membrane selection. Based on these results, the selected filtration membrane is expected to perform effective real particle removal in negative tone developer.

Keywords: Application specific filter ratings, negative tone developer, EUV lithography

1. INTRODUCTION

Negative tone development is being employed widely because of its superior resolution[1] and to accommodate progressively shrinking feature sizes including EUV lithography. Pall is developing a filtration product specifically targeted for this application. High particle retention and low extractables are key aspects of filtration products known to improve on-wafer defectivity.

The performance index of microelectronics-grade filter products is typically described in dimensions of particle removal rating, such as “2 nm”. These ratings describe a sieving mechanism for removal of hard particles from an aqueous colloidal system[2]. In real world applications, adsorptive mechanisms also play a critical role in contaminant filtration. To represent realistic filtration performance, complementary application specific ratings for DUV photoresists have been studied[3-6]. In this paper, the metrology for negative tone developer will be explored.

2. EXPERIMENTAL

2.1 On-wafer defectivity

Negative tone developer (n-butyl acetate, nBA) was passed through test filters of currently available filtration products listed in Table 1. An influent and the effluents were spin coated on 300 mm ϕ Si wafer then inspected by KLA-Tencor Surfscan SP5. The results of the SP5 were sorted by the size and separated at 50 nm because different behavior was found above and below this threshold.

*toru_umeda@ap.pall.com; phone 81 90 7837-4576; fax 81 29 889-1957; pall.com

Umeda, T., Kawada, Y., Masuda, K., Iguchi, N., Murakami, T. and Tsuzuki, S., “Application specific ratings of filters for negative tone developer”, in *Advances in Patterning Materials and Processes XXXV*, edited by Christoph K. Hohle, *Proceedings of SPIE Vol. 10586* 1058616 (2018).

Copyright 2018 Society of Photo-Optical Instrumentation Engineers. One print or electronic copy may be made for personal use only. Systematic reproduction and distribution, duplication of any material in this paper for a fee or for commercial purposes, or modification of the content of the paper are prohibited.

doi: 10.1117/12.2297164

Table 1. List of test filters for on-wafer defectivity test. “✓” indicates better performance compared to other test filters.

Test filter	Adsorption*	Filter rating**	Extractables***
Filter A	✓		
Filter B		✓	
Filter C			✓

*: Polar groups on the surface

**: Gold nanoparticle retention

***: Organic extractables evidenced by GC-MS

2.2 Palladium nanoparticle challenge test

The filter was challenged with metal nanoparticles. Figure 1 illustrates the test stand employed.

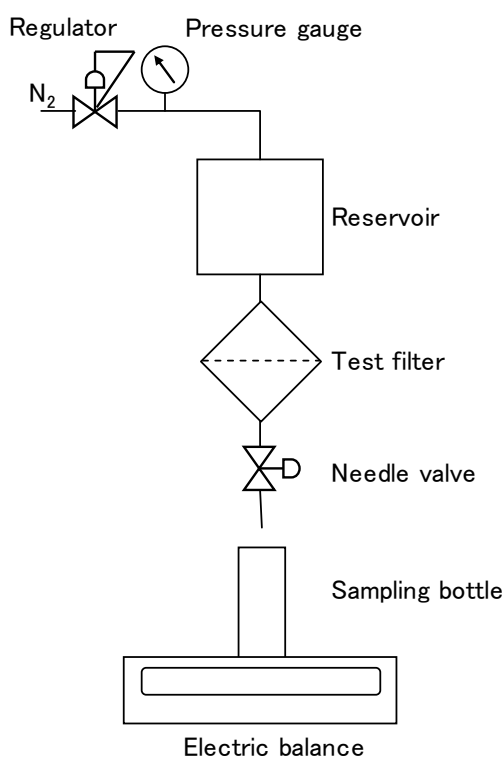


Figure 1. Schematic of filtration test stand employed for palladium nanoparticle challenge test.

The test filters were 47 mm diameter disks of both currently available filters (Filter A-C) shown in Table 1 and new filter product candidates (Candidate-1-3) shown in Table 2. Heptylamine-substituted palladium nanoparticles (Pd-HA), which were selected because of response to adsorptive filter surface and appropriate size for the test filter evaluation, were dispersed in nBA to be used as challenge particles. The diameter of the Pd core was 4 nm. The Pd-HA concentration in the influent was 0.5 ± 0.025 ppb. Flow rate was 3 mL/min. The Pd concentration in the influents and the effluents were analyzed using inductively coupled plasma mass spectroscopy (ICP-MS).

Umeda, T., Kawada, Y., Masuda, K., Iguchi, N., Murakami, T. and Tsuzuki, S., “Application specific ratings of filters for negative tone developer”, in *Advances in Patterning Materials and Processes XXXV*, edited by Christoph K. Hohle, Proceedings of SPIE Vol. 10586 1058616 (2018).

Copyright 2018 Society of Photo-Optical Instrumentation Engineers. One print or electronic copy may be made for personal use only. Systematic reproduction and distribution, duplication of any material in this paper for a fee or for commercial purposes, or modification of the content of the paper are prohibited.

Table 2. List of test filters of new filter product candidates for Pd-HA challenge filtration test. “✓” indicates better performance compared to other test filters.

Test filter	Adsorption*	Filter rating**	Extractables***
Candidate-1			✓
Candidate-2	✓		✓
Candidate-3	✓		✓

*: Polar groups on the surface

**: Gold nanoparticle retention

***: Organic extractables evidenced by GC-MS

3. RESULTS AND DISCUSSIONS

3.1 On-wafer defectivity at smaller than 50 nm

Figure 2 shows KLA-Tencor Surfscan SP5 defect counts sorted at ≤ 50 nm after spin coating of nBA with and without filtration using various filter types. As a result, defect counts for all the test filter effluents were reduced from the influent. The reduced counts probably suggest that the results indicate particle removal performance of the test filters. The filter A demonstrated significantly lower defect counts compared to the filter B as well as the filter C. This more correlates to adsorption performance in Table 1 than dimensional filter ratings and extractables, therefore adsorption performance of the filter is considered to give these results.

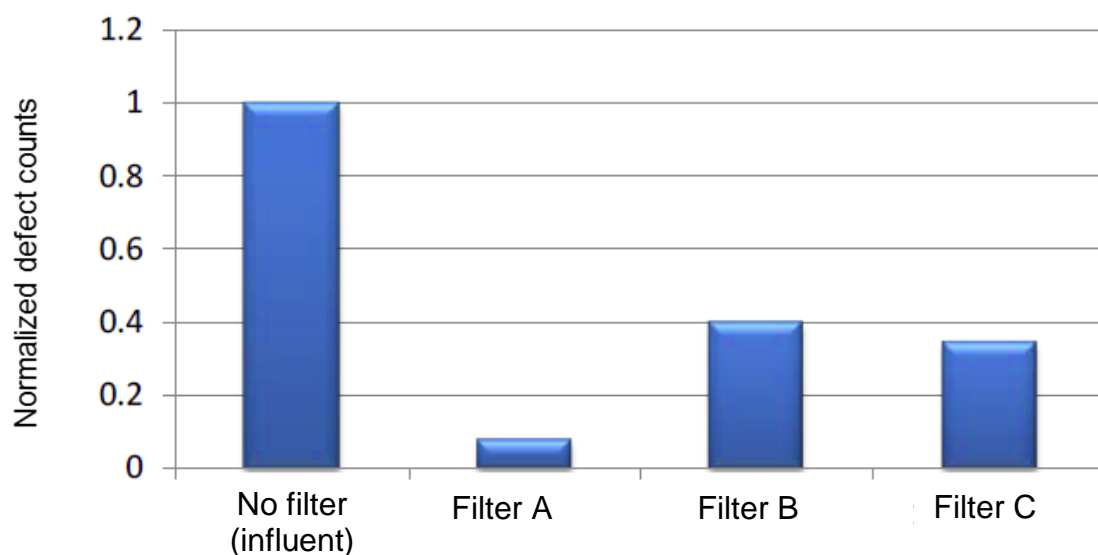


Figure 2. Normalized (no filter=1) defect counts (≤ 50 nm) on 300 mm ϕ wafer after spin coat of n-butyl acetate with and without filtration using various filter types. Inspection: KLA-Tencor Surfscan SP5.

3.2 Palladium heptylamine nanoparticle challenge test on currently available filtration products

Figure 3 shows challenge test results of palladium nanoparticles with heptylamine ligands suspended in nBA on the currently available filtration products. In this experiment, the filter A demonstrated significantly lower nanoparticle concentration in the effluent than either the filter B or the filter C. The results strongly correlate to the SP5 inspection results at ≤ 50 nm shown in Figure 2. The strong correlation suggests a possibility to utilize this Pd-HA challenge testing as a simulation test for SP5 on-wafer defectivity.

Umeda, T., Kawada, Y., Masuda, K., Iguchi, N., Murakami, T. and Tsuzuki, S., “Application specific ratings of filters for negative tone developer”, in *Advances in Patterning Materials and Processes XXXV*, edited by Christoph K. Hohle, Proceedings of SPIE Vol. 10586 1058616 (2018).

Copyright 2018 Society of Photo-Optical Instrumentation Engineers. One print or electronic copy may be made for personal use only. Systematic reproduction and distribution, duplication of any material in this paper for a fee or for commercial purposes, or modification of the content of the paper are prohibited.

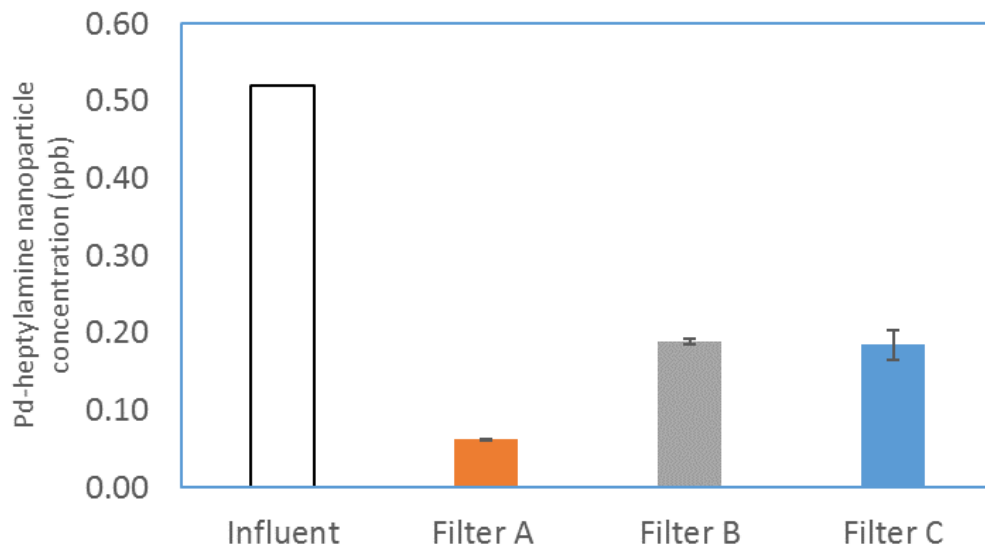


Figure 3 Palladium-heptylamine nanoparticle challenge results on currently available filters in nBA. Flow rate is 3 mL/min. for 47 mm ϕ disk filter. n=2. Error bar is max and min.

3.3 On-wafer defectivity at larger than 50 nm

Figure 4 shows SP5 defect counts at >50 nm on 300 mm ϕ wafer after spin coating of nBA with and without filtration using various filter types. In contrast to Figure 2, Filter C performed the lowest defect count in this size range. The defect counts in Filter A and Filter B were greater than the No filter, may indicate particle shedding or extractables from these filters and may not suggest particle removal efficiency. The results correlates to the level of extractables performance summarized in Table 1. Further, based on a fact that some extractables of filter products are known to cause on-wafer defects by crystallization in spin coating[7], extractables are considered to give these differences.

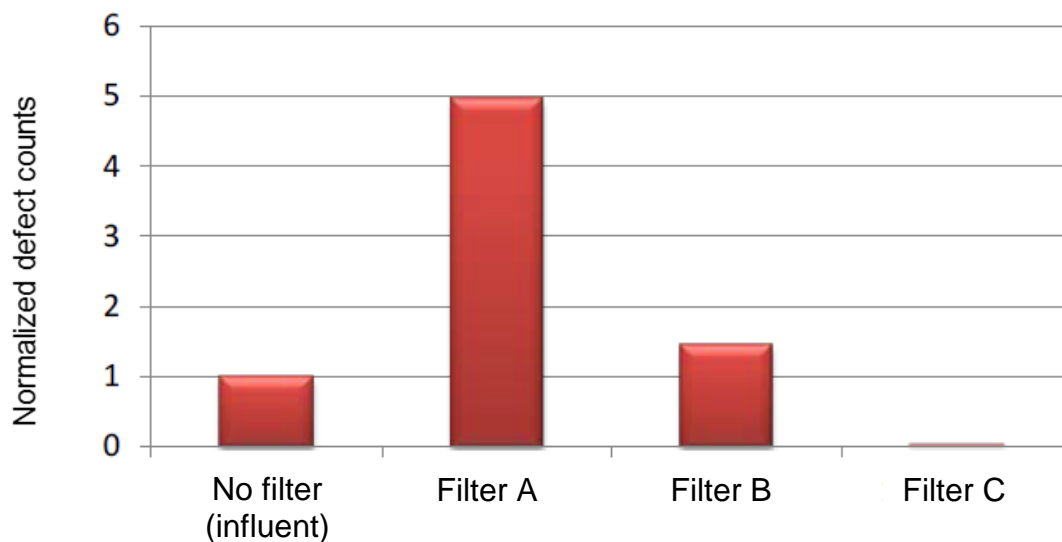


Figure 4. Normalized (no filter=1) defect counts (>50 nm) on 300 mm ϕ wafer after spin coat of n-butyl acetate with and without filtration using various filter types. Inspection: KLA-Tencor Surfscan SP5.

Umeda, T., Kawada, Y., Masuda, K., Iguchi, N., Murakami, T. and Tsuzuki, S., “Application specific ratings of filters for negative tone developer”, in *Advances in Patterning Materials and Processes XXXV*, edited by Christoph K. Hohle, Proceedings of SPIE Vol. 10586 1058616 (2018).

Copyright 2018 Society of Photo-Optical Instrumentation Engineers. One print or electronic copy may be made for personal use only. Systematic reproduction and distribution, duplication of any material in this paper for a fee or for commercial purposes, or modification of the content of the paper are prohibited.

3.4 Palladium heptylamine nanoparticle challenge test on new filter product candidates

Based on the SP5 results shown in Figure 2 and 4, adsorption as well as lower extractables are found to be critical for minimizing overall SP5 defects in nBA filtration. The test filters of new filter product candidates shown in Table 2 were selected with respect to low extractables and various adsorption performance. Pd-HA challenge results on the new filter product candidates are shown in Figure 5. As a result, candidate-2 and 3 performed similar retention as the filter A, indicating that these candidates are expected to perform effective particle retention performance in on-wafer defectivity.

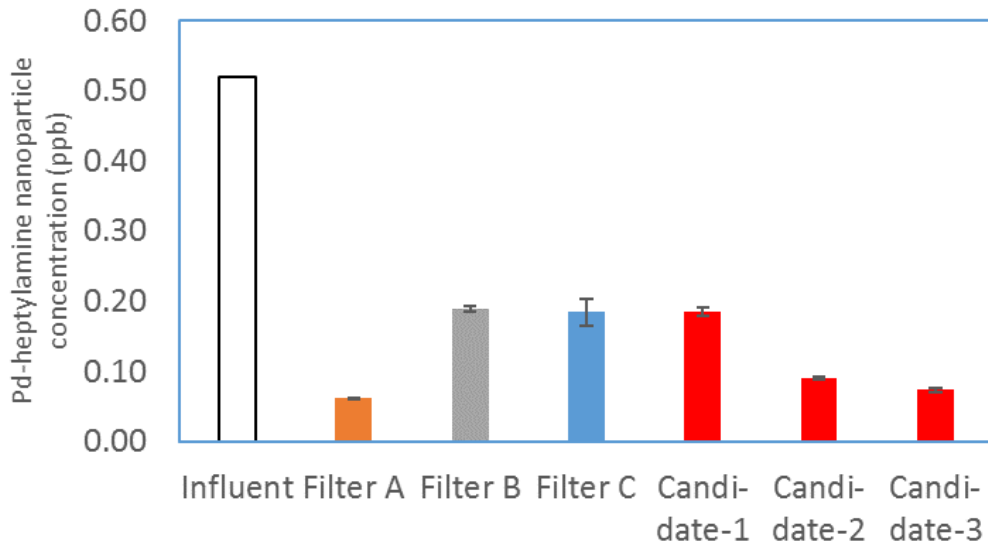


Figure 5 Palladium-heptylamine nanoparticle challenge results on new filter product candidates (Candidate-1 to 3) in nBA. Flow rate is 3 mL/min. for 47 mmφ disk filter. n=2. Error bar is max and min.

4. CONCLUSION

Particle challenge testing is much simpler than on-wafer defectivity inspection and enables faster and effective filtration membrane selection. Current study indicated that Pd-HA challenge test correlates strongly to on-wafer SP5 defectivity at ≤ 50 nm. Based on this, Pd-HA challenge test is expected to support effective new filter selection.

Since some of the new product candidates showed effective retention in Pd-HA nanoparticle challenge test, they are expected to reduce on-wafer SP5 defectivity at ≤ 50 nm. In addition, minimized extractables of the new product candidates are expected to reduce defectivity at >50 nm. These results suggest that the new product candidates effectively improve real particle removal in SP5 evaluation in negative tone developer.

REFERENCES

- [1] Tarutani, S., Tsubaki, H. and Kanna, S., "Development of materials and processes for double patterning toward 32- nm node 193- nm immersion lithography process," Proc. SPIE 6923, 69230F (2008).
- [2] Mizuno, T., et al, "A novel filter rating method using less than 30 nm gold nanoparticle and protective ligand," IEEE transactions on semiconductor manufacturing, Vol. 22, No. 4, pp. 452-461, (2009).
- [3] Umeda, T., et al, "Performance index determination for lithography fluid filters using metal nanoparticle," JSAP 57th Spring Meeting (2011).
- [4] Umeda, T., et al, "Adsorptive retention performance index for NGL process filters," SEMATECH International Symposium on Lithography Extensions (2011).
- [5] Umeda, T. and Tsuzuki, S., "Application specific ratings for lithography process filters," Proc. SPIE 8682, 868208 (2013).

Umeda, T., Kawada, Y., Masuda, K., Iguchi, N., Murakami, T. and Tsuzuki, S., "Application specific ratings of filters for negative tone developer", in *Advances in Patterning Materials and Processes XXXV*, edited by Christoph K. Hohle, Proceedings of SPIE Vol. 10586 1058616 (2018).

Copyright 2018 Society of Photo-Optical Instrumentation Engineers. One print or electronic copy may be made for personal use only. Systematic reproduction and distribution, duplication of any material in this paper for a fee or for commercial purposes, or modification of the content of the paper are prohibited.

- [6] Umeda, T. and Tsuzuki, S., “Adsorption characteristics of lithography filters in various solvents using application-specific ratings,” Proc. SPIE 9051, 90511G (2014).
- [7] Umeda, T., et al, “Wet particle source identification and reduction using a new filter cleaning process,” Proc. SPIE 9051, 90511F (2014).

KLA-Tencor and Surfscan are trademarks of KLA-Tencor Corporation.

Umeda, T., Kawada, Y., Masuda, K., Iguchi, N., Murakami, T. and Tsuzuki, S., “Application specific ratings of filters for negative tone developer”, in *Advances in Patterning Materials and Processes XXXV*, edited by Christoph K. Hohle, Proceedings of SPIE Vol. 10586 1058616 (2018).

Copyright 2018 Society of Photo-Optical Instrumentation Engineers. One print or electronic copy may be made for personal use only. Systematic reproduction and distribution, duplication of any material in this paper for a fee or for commercial purposes, or modification of the content of the paper are prohibited.

doi: 10.1117/12.2297164